



Infrared heater
SolBee SBH 15/20

**INSTALLATION AND OPERATING
INSTRUCTION**

2020

Please read this instruction carefully before starting using the appliance.

The manufacturer/seller doesn't accept any responsibility for damage of property or personal injury resulting from failure to follow the instructions in this manual.

Following the instructions in this manual will ensure long working life, the overall electrical and mechanical reliability. Keep this manual in a safe place.

Contacts:
UAB Komerta
M. Mazvydo str. 15
Vilnius, LT-06256
Lithuania
Tel. 657-73013
info@solbee.eu
www.solbee.eu

INSTALLATION AND OPERATING INSTRUCTION

WARNING:


The safety of the heater is ensured by using it properly and in accordance with the instructions in this manual. It is therefore necessary to keep this instruction for future references. Unplug device from the wall outlet or switch off the fuse before performing any installation and/or lamp replacement work.

Class I, IP 44

POWER: SBH 15 C, SBH 15 B: 1500 W, 220-240 V, 50/60 Hz
SBH 20 C, SBH 20 B: 2000 W, 220-240 V, 50/60 Hz

CONSTRUCTION

Body of heater made from powder coated sheet steel. The reflector is made of mirror anodized aluminum/stainless steel. With cable and plug (labeled as C) or terminal box (labeled as B). Installer can use wires 3x1,5 mm² to connect to power the heater set with connection box.

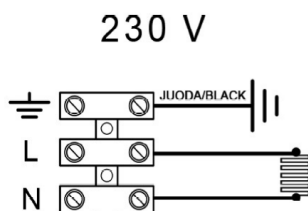

Power connection principal scheme for heaters with connection box

INSTALLATION

- The heater should be installed on non-flammable surfaces.
- The heater should be installed at height of 2,5 – 3,5 meters.
- The minimum distance between the heater and the heated surface must be at least 1,5 meters.
- The heater should be mounted on the special bracket, which allows user to adjust the angle of the heat transfer.
- The heater cannot be installed directly above the power socket.
- **Always install the heater in a horizontal position.**

IMPORTANT

- **Before repairing, replacing halogen lamp, or cleaning it, unplug/switch off the heater from power and wait for the heater to cool down!**
- Never use an extension cord with this appliance.
- Only a qualified electrician should replace a faulty heating lamp or cord.
- If you have any doubt, please consult a qualified electrician.
- If the heater is mounted on a tripod, the minimum distance from the floor should be 2 meters.
- The heater must be secured with a minimum clearance of 2 meters from objects such as cardboard, fabrics, etc. If the heater is used in workshops or garages where flammable or inflammable materials are stored, the heater should be installed at least 4 meters from the source of the risk.
- Keep the heater away from the reach of children.

WARNING:

- If the heater is used where children are present, adult supervision is required; the heater should not be used by adults or children whose physical, sensory and mental abilities do not allow them to take the necessary safety measures without adult supervision.
- Never touch the heater with wet or damp hands.
- Never touch the heater barefooted.
- The heating lamp, power cord could be replaced only by the manufacturer, warranty service or a qualified electrician.

HEATING LAMP REPLACING INSTRUCTION

1. Unplug/switch off the heater from power.
2. Wait for the heater to cool down.
3. Remove the front panel and release the reflector.
4. Loosen the halogen lamp contacts and remove the lamp.
5. Insert a new halogen lamp by repeating the above steps in reverse order without touching the lamp with bare hands.
6. A special halogen lamp could be acquired from authorized dealers.

WARRANTY SERVICE

Heater has 2 years warranty from the date of purchase:

- After this period, warranty service will be ceased.
- The invoice, purchase receipt or agreement shows the duration of the warranty period.
- Warranty damage to the heater due to factory fault.
- Warranty service does not apply to wearing parts.

Warranty service does not include lamp replacement.

Warranty service is not applied if:


- The heater has been disassembled or repaired by unauthorized persons.
- Heater has been neglected or damaged during transportation or use.
- User was not following operating instructions, unauthorized persons performed maintenance work, heater installed incorrectly and failed to comply with applicable laws.

The heater will be repaired, not replaced. During the warranty period, repairs are free of charge upon delivery to the factory or to one of our authorized distributors. All transport costs are paid by the user.

Important information about environmentally friendly disposal of the heater

IN SOME EUROPEAN UNION STATES FOR THIS DEVICE NATIONAL LAW IMPLEMENTING THE WEEE DIRECTIVE IS NOT APPLIED, SO WITHIN THESE COUNTRIES COULD NOT BE APPLIED SEPARATE DISPOSAL PROCEDURE AFTER THE END OF DEVICE WORKING LIFE.

The device complies with EU Directive 2002/96/EC. After the end of device life, the heater cannot be disposed with the household waste and must be taken to an electrical and electronic equipment collection center or returned to the seller, then purchasing new device. It is the user's responsibility to dispose this device correctly at the end of its working life. Failure to comply with this procedure is subject to penalties under the Waste Management Act. Proper sorting and subsequent recycling, treatment and environmentally friendly disposal of waste avoids environmental damage and associated health risks, also encourages the recycling of materials used in the device.

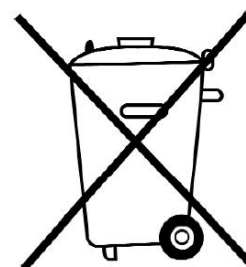

WARRANTY REPAIR NOTES

Warranty 2 years

	Warranty repair date	Performed repairs
Model.....		
Purchase date.....		